


Electric Corrugute Assembly Instructions

Thank you for purchasing an Electric Corrugute kit - please look on our website for more detailed instructions:



www.corrulute.uk/make-it

Step 1: Fold up the sound box.

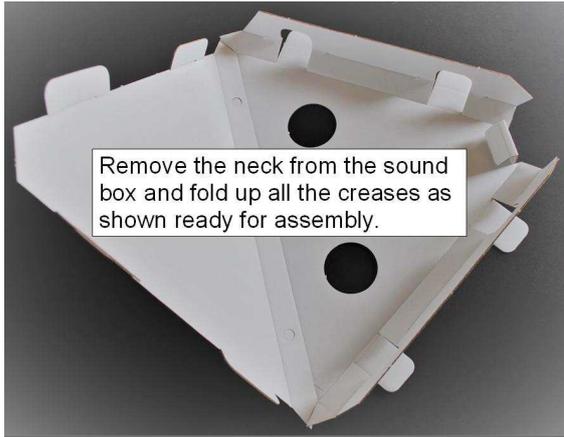



Step 2: Decorate your sound box - have a look at our 'Cool Designs' page on our website.

Step 3: Attach the fret board to the neck.

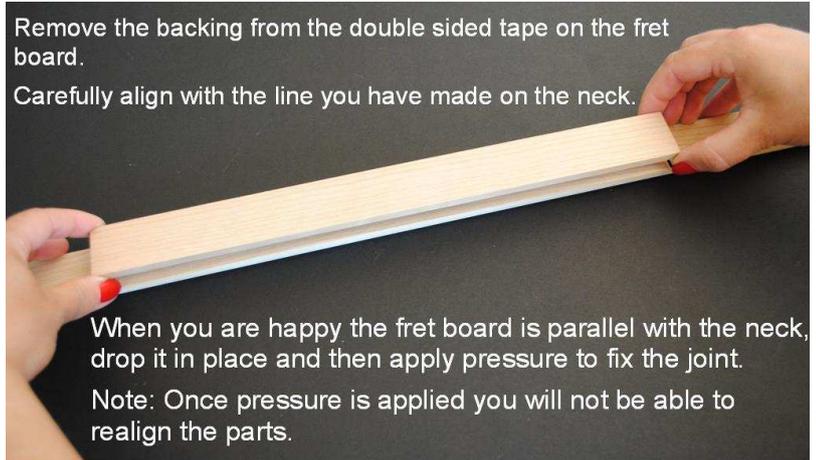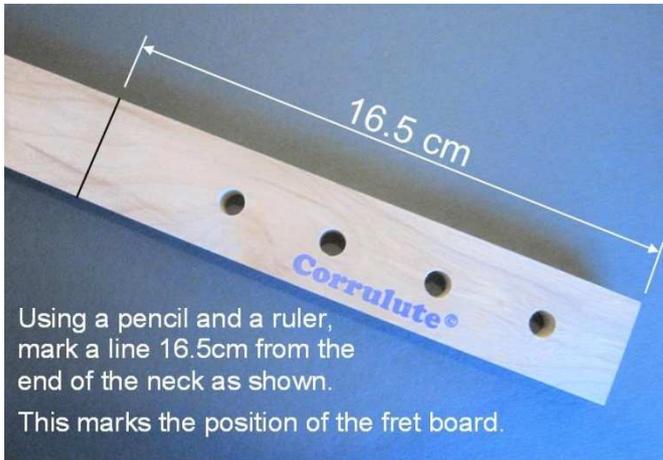

Step 4: Lightly sand the completed neck and fret board (don't sand over the Corrulute logo).


Step 5: Attach the 4 ferrules and 4 tuners to the neck (use a No 1 Pozidriv screw driver).

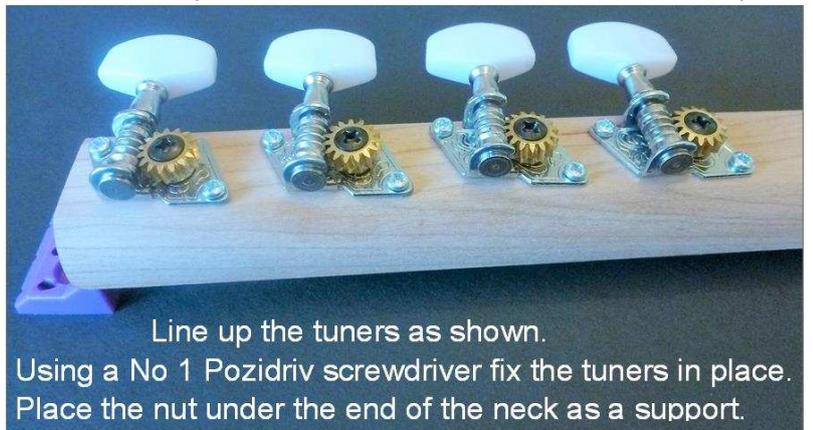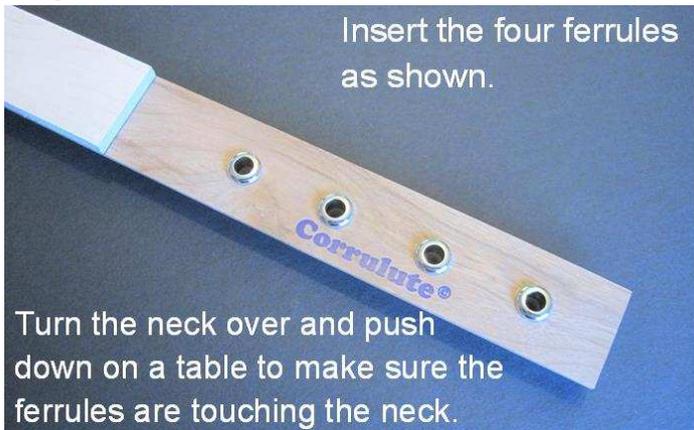



Step 6: Attach the nut to the neck as shown.

Tip: Be careful not to overtighten the screws.




If you strip the thread; remove the screw and refill the hole in the neck with a used match and start again.

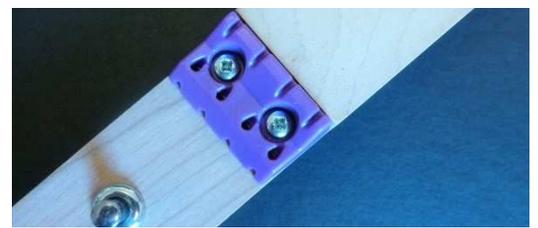



Step 7: Mark out the position of the frets.

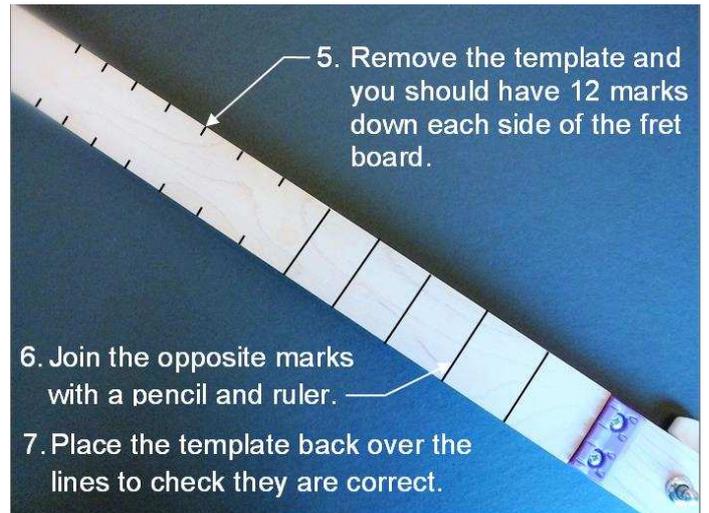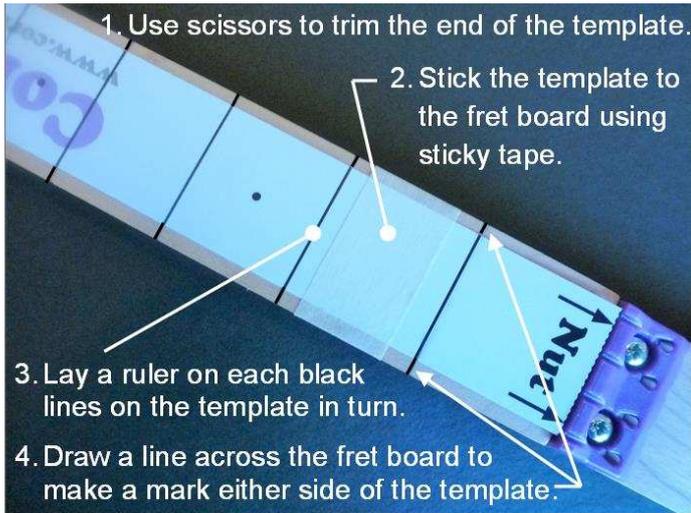


Step 8: Stick the frets on the fret board.

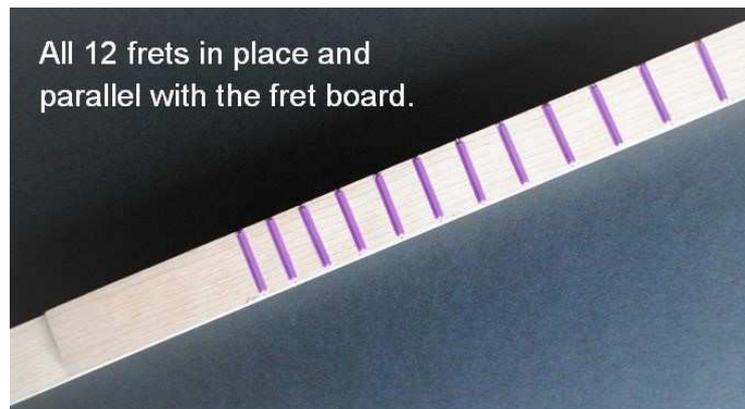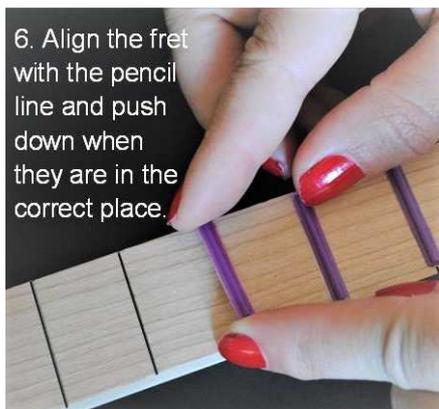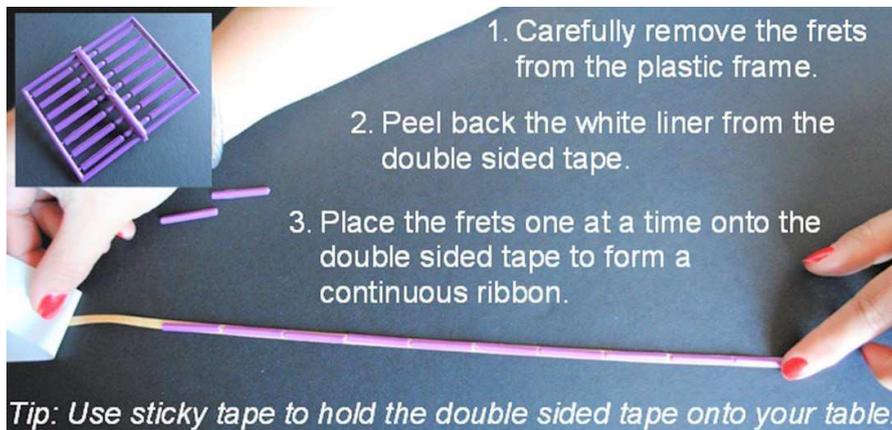




Step 9: Attach the completed neck to the sound box.

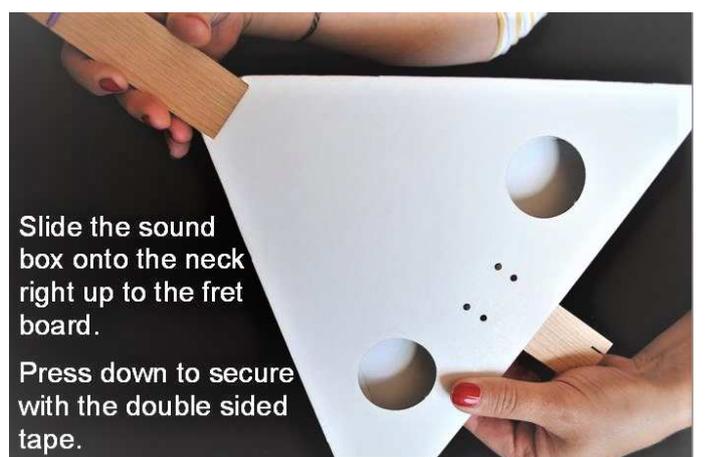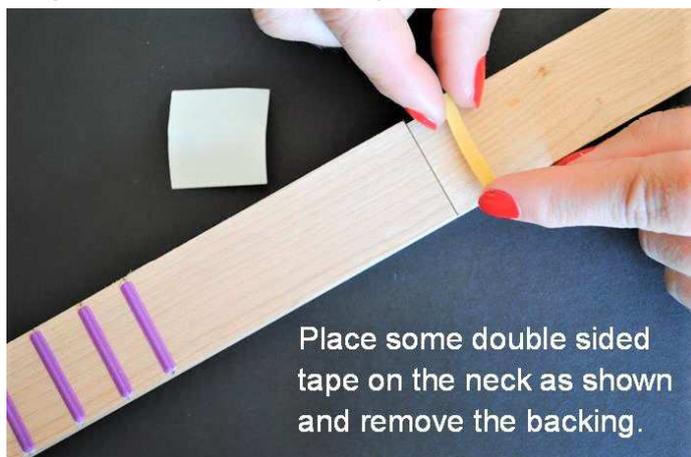

Step 10: Attach the bridge to the sound box.

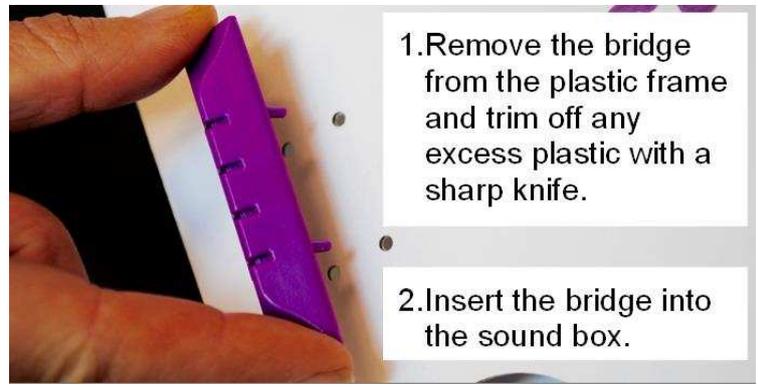

Step 11: Attach the strings.

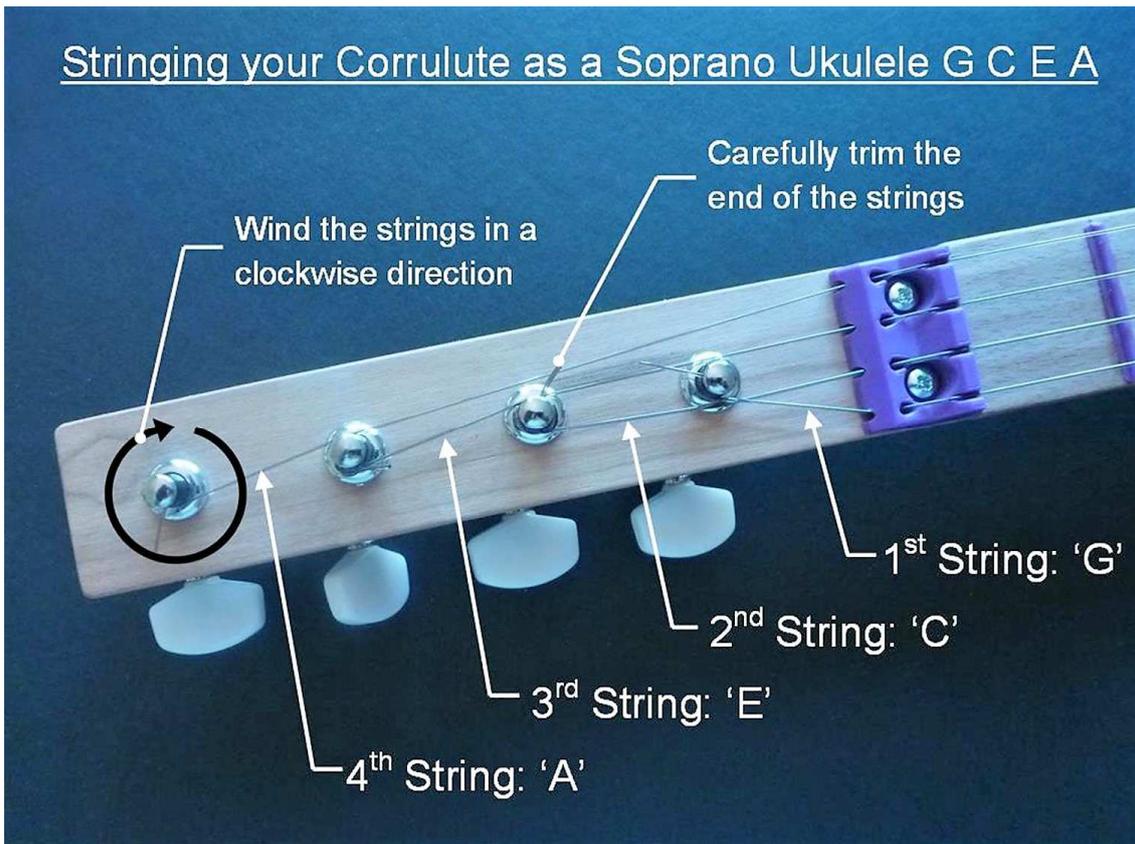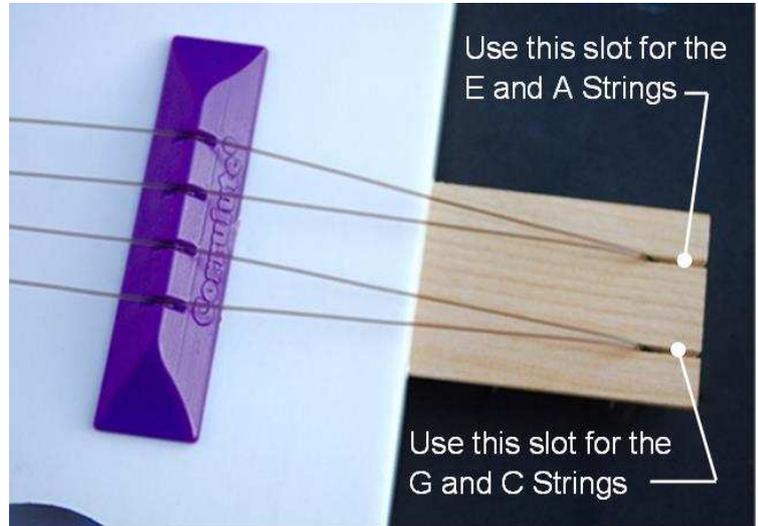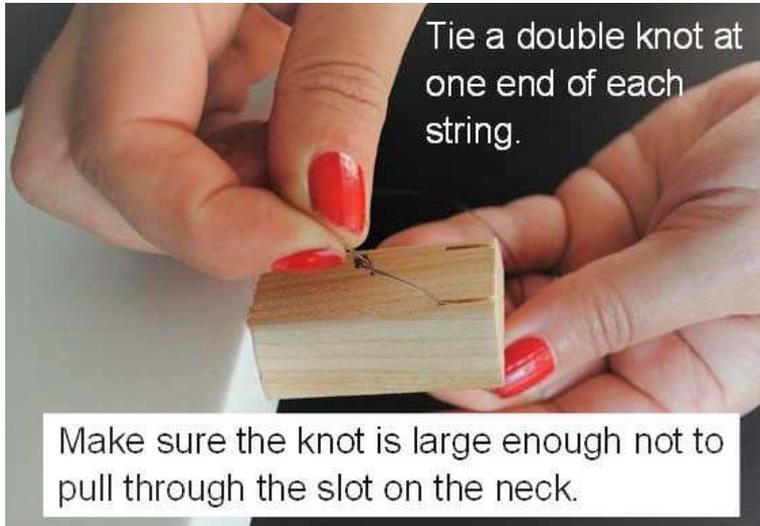

The finished Corrulute



Once you have finished making your Corrulute you will need to tune it. The Corrulute sounds great when you tune it like a soprano ukulele G - C - E - A. However, there's no reason you can't experiment with other tunings, be creative!

Please go to our website for tuning instructions (<http://www.corrulute.uk/tuning.html>) and use our free online tuner or treat yourself to a clip-on digital tuner.



Email: info@corrulute.uk

Copyright © 2016 by Corrulute LLP

Registered in England and Wales under OC374789

Corrulute is a registered Trademark and its intellectual property is patented (2513176 A).